
Configuring the Imageteam (IT) 3800 Barcode Reader

April 10, 2006

Before you configure the Imageteam (IT) 3800 barcode scanner, please make sure it is connected to the keyboard port (where your keyboard cable was originally connected on your PC) -- do not connect it to your mouse port! **NOTE:** the barcode scanner should work right out of the box. This document may be useful if you wish to customize and/or need to configure the scanner to include a carriage return, to make it triggerless, and/or to connect it to a USB port or laptop.

IMAGETEAM™ 3800, 3900, 4600, 4800, 5600, 5800, Hand Held Linear Imager

Programming Bar Codes - USB, Laptop, Suffix, Trigger Modes, Factory Default

USB Terminal Interface

Programs the imager to work as a USB Keyboard Device



~ 0 1 T E R M I D 1 2 4 .

Keyboard Emulation for Laptops

Programs the imager to work without an external keyboard.



~ 0 1 K B D S T Y 5 .

TAB Suffix

Programs the imager to add a TAB key function after each scan.



~ 0 1 S U F B K 2 9 9 0 9 .

Carriage Return Suffix

Programs the imager to add an Enter key function after each scan



~ 0 1 V S U F C R .

Clear all Suffixes

Removes all suffixes



~ 0 1 S U F C A 2 .

Auto Trigger

Hands free, scans continuously at full power.



~ 0 1 T R G M O D 1 .

Presentation Mode

Hands free, LEDs are off until a bar code is presented.



~ 0 1 T R G M O D 3 .

Reread Delay = Medium

Sets a delay before the imager can read the same bar code again. (Not available in IT46/4800)



~ 0 1 R R D D L Y 1 .

Manual Trigger

Must press the trigger to activate the imager.



~ 0 1 T R G M O D 0 .

Factory Defaults

Resets your imager to default settings.



~ 0 1 D E F A L T .

Sample Code 39



T E S T 1 2 3